

Operation Instructions

Make your choice...


M-206K Metal Touch Type Access Control Keypad



1 Safety Instructions


! Thank you for purchasing this product. In order to use this product correctly, please read this manual carefully before use.

2 Product Overview

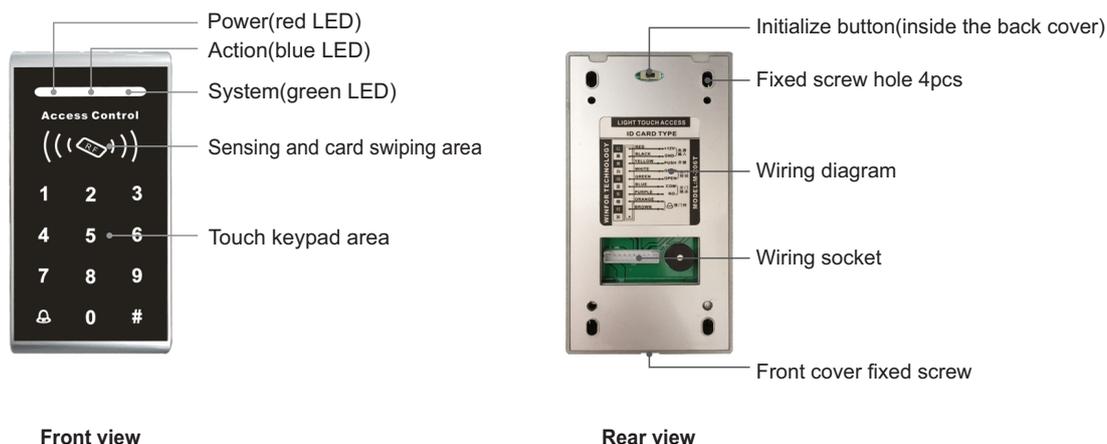

3 Characteristics & Wiring Diagram

- Touch key designed, new streamlined appearance, novel and fashionable style.
- It can set up 1,000 cards and has a capacity of 1,000 standard users.
- The door opening methods include three working modes: sensing card, card or password, and card + password.
- Simple and clear operation. The cards setting is flexible and can be deleted offline.
- It can be directly connected to an automatic door to achieve the function of unlocking first and then opening the door.
- Exquisite and compact appearance, stable performance and easy to install.

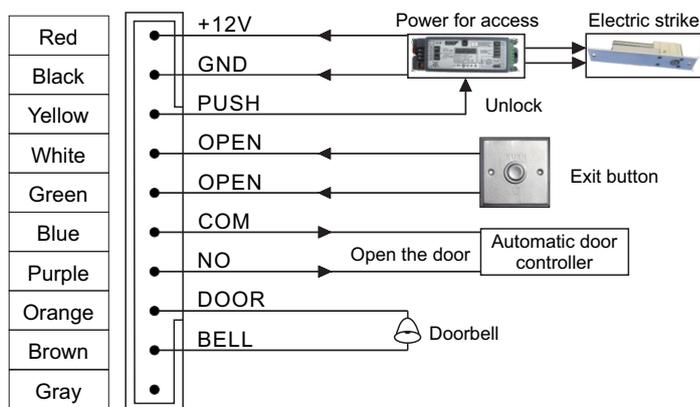

4 Technical Parameters

Power voltage: DC 12V±3%	Card reading distance: 20-100mm
Static current: 35mA	Working temperature: -10°C~70°C
Action current: 50mA	Working humidity: 10%~90%
Storage capacity: 1000 pcs users(ID card)	User card type: EM or EM compatible card
Door opening password: 1pcs public password	Dimension: 125(L)x65(W)x17(H)mm
Time leg of door unlock and open: 400ms	

5 User States

Standby	Unlock	Swipe card	Password opening	Card + password opening
Red light keeps on	Blue light keeps on Red light OFF	Card valid: Blue light keeps on, red light OFF; 1 beep voice; Card invalid: 3 beep voice	Password correct: Blue light keeps on, 1 short beep, red light OFF; Password wrong: 3 beep voice	Card invalid: 3 beep voice Card valid: Blue light is on, red light on; Password correct: Red light OFF; Password wrong: 3 beep voice

6 Programming Operation Status

Procedure	#	12345	41#	Card reading	#	
Sounds and LED indicators	Three LED light all keeps on	Password correct: Blue light OFF; Password wrong: After 3 beeps, only red light is on	Red light OFF	Valid cards that can be added: 1 short beep, blue light flash once, green light on. Add invalid card: 3 beeps and green light is on.	Red light on Green light on	Red light on

7 Operation Process

Operation name	System password	Function	Operate	Exit	Operating result	Remark		
Revise system password	#12345	1	88888(sample)	*	System password is 88888	System password is 5-digit		
Revise opening password	#12345	2	2580(sample)	*	Opening password is 2580	Opening password is 4-digit	Commonly used	
Set door opening ways	#12345	3	01	*	Card or password all can open the door	00-swipe card for opening; 01-card or password; 02-card + password		
Add card (enter single card No.)	#12345	4	0# card No.#	*	This card No. have been entered	Card No. refers to the last 8 digits of previous number group of the inkjet number		
Add card (swipe card continuously)	#12345	4	1# swipe card#	*	All the cards that were swiped have been added	Swipe multiple cards continuously	Commonly used	
Add card (card No. in batches)	#12345	5	0# card No.# qty of card# (beep voice)	*	A total of a specified number of cards have been added from initial card No. (consecutive No.)	The qty of card must be 3-digit, and when beep voice is finished then push "*" to exit		
Add card (swipe card in batches)	#12345	5	1# swipe card enter qty of card# (beep voice)	*	A total of a specified number of cards have been added from initial card No. (consecutive No.)	The qty of card must be 3-digit, and when beep voice is finished then push "*" to exit		
Delete card (enter single card No.)	#12345	6	0#card No.#	*	This card No. have been deleted	Card No. refers to the last 8 digits of previous number group of the inkjet number		
Delete card (swipe card continuously)	#12345	6	1# swipe card#	*	All the cards that were swiped have been deleted	Swipe multiple cards continuously	Commonly used	
Delete card (card No. in batches)	#12345	7	0# card No.# qty of card#	*	A total of a specified number of cards have been deleted from initial card No. (consecutive No.)	The card No. must be consecutive No. and the qty of card must be 3-digit		
Delete card (swipe card in batches)	#12345	7	1# swipe card enter qty of card#	*	A total of a specified number of cards have been deleted from initial card No. (consecutive No.)	The card No. must be consecutive No. and the qty of card must be 3-digit		
Delete all cards	#12345	8	88# (long beep voice)	*	All user cards have been deleted	After long beep voice, all user cards are deleted		
Revise door opening time	#12345	0	05(2-digit seconds)	*	Door opening time is revised to 5 seconds	From 01 to 99 seconds	Commonly used	
System initialization	Power off, open the back cover, waveband button is in "RESET" position.		→	Repower, continuous beep voice, 3 indicator lights flashes	→	Power off, restore the waveband button to "NORMAL" position	→	System password restore to 12345, other data isn't deleted

Note: The default setting of system password is 12345. If you hear 4 beep alarms after entering 12345, means default setting has been changed already. Initialization setting can restore the default password.