


# Operation Instructions

Make your choice...



## LV803E Embedded Human Figure Recognition Sensor






### 1 Safety Instruction

 Thank you very much for purchasing this products, in order to use it correctly, please read this manual carefully before use it.

### 2 Product Overview

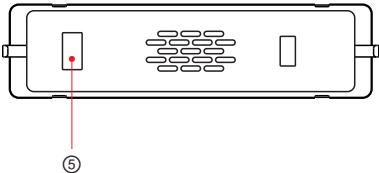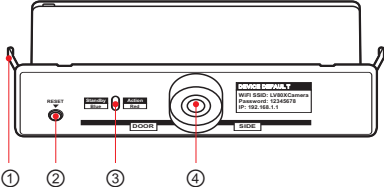

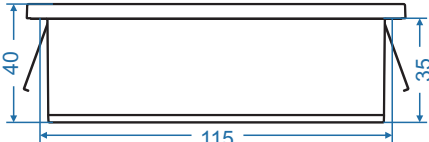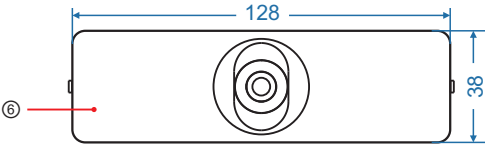


Product dimensions: 128(L)x38(W)x40(H)mm    Mounting hole dimensions: 115(L)x30(W)x40(H)mm

① Metal shrapnel \* 2    ② Reset button    ③ LED indicator light    ④ Camera


⑤ Wiring terminal    ⑥ Front cover

### 3 Wiring Diagram

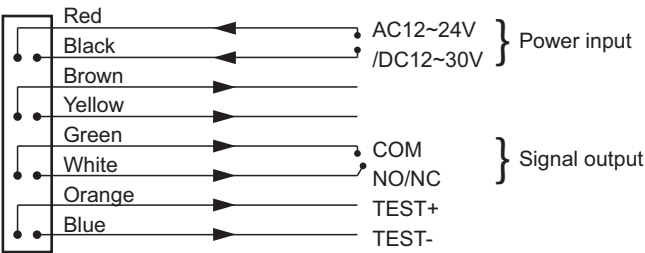


### 4 Installation

[1]




Make sure the appropriate position, and drill the holes based on the hole size of the manual.

[2]

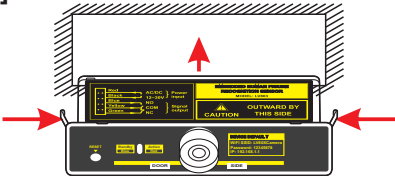


Tight the metal shrapnel on the both sides of the sensor, place the sensor in the mounting hole.

[3]

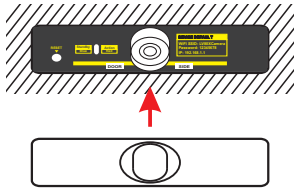

Debugging is completed, close the semi-transparent cover (refer to step 5 to debugging).

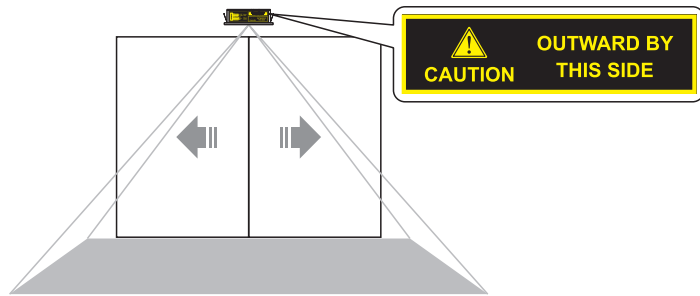

## Attentions

The scanning range of this series of sensors is unidirectional, when installation on site, please put the "Outward by this side" sign towards the human figure induction direction.

## 5 Adjustment

### Power-on Networking

After power-on, wait for 10 seconds for the start time of the internal program of the sensor. Until hear a buzzer voice that lasts 3 seconds, the device has created a Wi-Fi, please use your mobil phone or other devices to connect this Wi-Fi.

Device default Wi-Fi name: LV80XCamera\_xxxx(Randomly generate a 4-digit sequence), Device default Wi-Fi password: 12345678

After connected(please turn off the data network of your mobile phone), open your phone browser, enter and search 192.168.1.1 enter the current device's control interface.

### Control Interface


#### Wi-Fi name and password change area

Enter a new Wi-Fi name and password, click "change the account(confirm to restart)" key and the device will restart, new account will effective.

NOTE: Wi-Fi name cannot contain special characters, and the password must be set at least 8-digit.

#### Detection range adjustable area

There is an detection area box in the monitoring screen. When in standby state, two keys in each direction control the edges corresponding to the detection area respectively. Press the self-recover key, restore the factory defaulted setting(Full frame sensing range, sensitivity 50.)

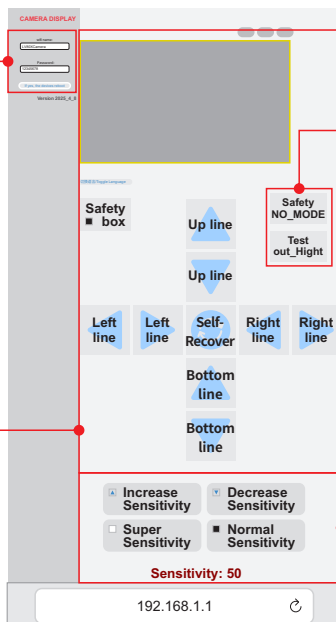

#### Safety NO/NC Mode & Test out High/Low Switch

Note: When the test function is not in use, the test signal input must be set to a high electrical level output, otherwise the sensor will not work properly.

#### Sensitivity adjustable area

Each time the sensitivity increase/decrease button is pressed, the sensitivity will increases / decreases by 10(the default sensitivity is 50), the higher the sensitivity, the more sensitive the detection, but the probability of misidentification also increases.

**Super sensitivity** dual model recognition (recognition time about 200ms);

**Normal sensitivity** single model recognition (recognition time about 100ms).

Switching working mode will restart the device to take it effect (factory default super sensitivity mode)

## 6 Troubleshooting

Failures	Possible reasons	Improvements
LED indicator light off	The sensor is not connected to power supply	Check the cable connection, and whether power supply is normal
Red light is always on, but door won't be opened	Wiring fault	Check and adjust the wiring, re-power on
1, Detection isn't sensitive enough; 2, Object movement leads to false triggering.	Sensitivity is too low or too high	Adjust the sensitivity
People near to the doors, but sensing fails	Detection range adjustment deviation	Restore the default detection range and adjust it again



Due to the limitations of AI Neural Network deep learning, in some special scenes, the system will output certain confidence for some non-human figure objects (similar human figure), and it is possible to output signal. Please try to solve the problem by the following methods:

- 1, Rotate the position of the objects, may not be recognized as a human figure.
- 2, Reduce the sensitivity.
- 3, Adjust the lens angle of camera or adjust the detection selection area, so as to avoid the object appearing in the screen.

## 7 Technical parameters

Detection function:	human figure activated, safety
Camera pixel:	HD 1080P
Response speed:	100ms
View angle adjustment:	±20°
LED indicator:	standby in BLUE, sensing in RED
Power supply:	AC12~24V, DC12-30V
Standby current:	170mA (DC 12V)
Action current:	200mA (DC 12V)
Working temperature:	-20°C~60°C
Working humidity:	10%~90%RH
Installation height(max):	5 meters
Dimension:	128(L)x38(W)x40(H)mm

## 8 Packing list

NO.	ITEM	PCS	REMARK
1	Sensor	1	sensor, and 3 covers
2	8-Pin cable	1	2500mm
3	Installation instructions	1	